

Trig In: Trigger input to trigger or restart the envelope. A restart (retrigger) is only possible when the decay phase is reached. The length or the end of the trigger voltage has no influence on the shape of the envelope. By default, the switching socket is preassigned to the "Comp. Out" of the preceding AD generator (see the labels "Cp4", "Cp1", "Cp2" and "Cp3" next to the socket).

