

CV In 2 (per VCO/LFO unit A - D and for all oscillators together): Attenuator for the control voltage input "CV In 2" for the frequency of the respective oscillator.

Frequ. (per VCO/LFO unit A - D and for all oscillators together): Manual control of the frequency of the respective oscillator.

VCO/VCLFO (per VCO/LFO unit A - D): Switch to switch between VCO mode (frequencies in the audio range) and slower LFO mode.

up/down/both (for VCO/LFO D): Switch for changing the running direction on a rising or falling edge at the sync input "Direction".

Details on Reset and Direction see below.

