

**Frq.:** Controller for manually setting the frequency (as part of the pre-selection on the "Range" switch).

**CV2:** Attenuator for the control voltage input "CV2".

**Range:** Switch to select the speed range between "L" (low), "H" (high) and "M" (middle).

