

**Frequ.:** Manual controller for the frequency of the LFO.

**CV Mode:** Switch to switch the "CV" controller between pure attenuator ("At" like "Attenuator") and polarizer ("Pol"). In polarizer mode, the control position to the left of center ensures that the applied control voltage has a negative influence on the LFO frequency, while to the right of it it has a positive influence.

**CV:** Attenuator for the control voltage input "LFO CV" (to control the frequency of the LFO).

**VCA Mode:** Switch to switch the built-in VCA between pure attenuator ("At" like "attenuator") and polarizer ("Pol").

**Delay:** Manual control for the speed of the attack time of the built-in attack envelope.

