**Addr.:** Manual selection of the active "step" (for the switch or the T&H). Control voltage and manual "Addr." knob add up and have priority over switching via trigger.

**CV:** Attenuator for the control voltage to switch the active "step".

