

# A-154 Sequencer Controller

Mode CV: Attenuator for the "Mode CV" control voltage input.

First CV: Attenuator for the "First CV" control voltage input.

Last CV: Attenuator for the control voltage input "Last CV".

Clock CV: Attenuator for the "Clock CV" control voltage input.

PW CV: Attenuator for the control voltage input "PW CV".

Manual: Controls for manual setting of Mode, First Step, Last Step, Clock and PW. The manual settings and the control voltages are each added.



DOEPFER