

# Controller

Start: Button to start the sequencer manually.

Steps switch: Switch between "8 Step" and "16 Step" mode. Warning: "First Step" and "Last Step" also work in "16 Step" mode between step "1" and step "16".

Stop: Button to stop the sequencer manually.

Reset: Button for manually resetting the sequencer.

Clock: Button for manually advancing the currently active step of the sequencer.

Man.: Switch to control a connected A-155 again through its internal control unit. Caution: If two A-155s are connected, the internal control unit of the first A-155 takes over both sequencers (independent operation of the two sequencers is not possible).

