



**Start** button: Manual start of the sequencer.

**Stop** button: Stop the sequencer manually.

**Clock** button: Manual switching to the next step (only if the sequencer is started).

**Reset** button: Manual jump directly to the first step – the reset takes place immediately when the button is pressed.