

8 "**Select**" touch buttons: These buttons can be used to select a track, e.g. because a specific function (see the following function buttons "Tr Set" to "Rand.") is to be applied to this track.

8 "**Mute / Submenu**" touch buttons: "Mute" can be used to mute the corresponding track. It then does not output any triggers during operation, the LED above "Mute" lights up when the track is muted.

Switching matrix with touch buttons for 8 tracks with 16 steps each: Each button has a status LED that shows whether a trigger signal is output for this step (and this track). You can toggle between "on" and "off" by tapping the button.

