

Tr Set / Tr Delete: After selecting a track with "Select", triggers can be activated with these touch buttons during operation or deleted with "Tr Delete".

Shift L / Shift R: After selecting a track with "Select", the selected track can be shifted one step to the left per keystroke or one step to the right with "Shift R", i.e. the originally programmed trigger signals are now shifted by one or triggered several steps earlier or later.

Invert: The steps with set trigger and not set trigger of the selected track are inverted. Where a programmed trigger was triggered previously, the step now remains silent and vice versa.

Swap: On the selected track, the first 8 steps are swapped with the last 8 steps.

A-B / A-B-C-D: With this function, two patterns, or in the case of "A-B-C-D" four patterns saved one after the other - for all 8 tracks - are linked and played back one after the other.

First / Last: By pressing this button at the same time as a step button of the selected track, the corresponding step is set as the first step or, in the case of "Last", as the last step of this track.

Forw / Backw. / Pend. / Rand.: The selected track is played forwards (default) or backwards with "Backw.", alternately forwards and backwards with "Pend." and in random order of the steps with "Rand.".

Recall / Store: This button is used to load patterns from memory. Together with the "SHIFT" button, the current pattern is written into the memory ("Store").

SHIFT: The "SHIFT" key enables further functions of the buttons to be called up (highlighted in black on the panel). Currently this is only the "Store" function.

