

**Start:** Input for a trigger signal to start the sequencer.

**Stop:** Input for a trigger signal to stop the running sequencer.

**Reset:** Input for a trigger signal to reset the sequencer to the first step of the run. The next trigger in the "Clock" input or the next manual actuation of the "Clock" button is required for resetting.

**Clock:** Input for a trigger or clock signal with which the sequencer is clocked. During operation, the sequencer is switched one step further with each new trigger signal at this input.

**Func. 1 - Func. 4:** These functions are not yet implemented.

