

Start: Manual button to start the sequencer.

Stop: Manual button to stop the running sequencer.

Reset: Manual button to reset the sequencer to the first step of the run. The next trigger in the "Clock" input or the next manual actuation of the "Clock" button is required for resetting.

Clock: Manual switch to advance the sequencer one step at a time.

Func. 1 - Func. 4: These functions are not yet implemented.

