

Cl: Input for a clock trigger or, when used as an audio frequency divider, the audio input for a square-wave signal.

Rs: Reset input for another trigger signal, which resets all outputs of the clock divider to the initial values.

