

PW: Manual adjustment of the pulse width of the output signal. In the center position, a symmetrical square-wave signal is output.

PWM: Attenuator for the control voltage input "CV", which modulates the pulse width.

