

Contr. Board: Connection for the ribbon controller.
Warning: although the connector has the mechanical format of a USB connector, the controller is not a USB device. No USB devices can be connected to the control electronics either!

