

Hold: Switch to toggle position measurement between continuous operation ("On") and operation only when touched ("Off"). With "Off" not only the gate signal but also the position CV is reset to 0 V when released, with "On" the last CV is held, but no gate signal is generated in the "Position" section when touched. The behavior is similar to a "Track & Hold" circuit.

Scale (Position): Control for scaling the output voltage for the position CV.

Thres (Pressure): Threshold value for triggering the "Pressure" gate signal.

Scale (Pressure): Control for scaling the output voltage for the pressure CV.

