

I/O1 and I/O2: Inputs or outputs for audio signals or control voltages that can be connected to the "O/I" socket.

O/I: Input or output for audio signals or control voltages that can be connected to "I/O1" or to "I/O2".

CV: Input for a control voltage that connects the "O/I" socket to either the "I/O1" socket or to "I/O2". In the "Toggle" mode of the respective switch, a short trigger signal is sufficient to toggle between the two sockets. In "Level" mode, a sustained gate signal (at least 3.5V) is required to connect "O/I" to "I/O2", otherwise "O/I" is connected to "I/O1".

